

How To Remove, Ship and Re-install Engine for ATV / UTV / RTV

- Contact nFLOW regarding your order and for further instructions.
- nFLOW requires the customer to utilize certified professional mechanics to perform work or perform this work under direct certified mechanic's supervision.
- Wear safety apparel including eye protection during all phases of removal, installation and transporting of nFLOW products.
- Allow vehicle to completely cool down before attempting to remove fluids or parts.
- Disconnect battery and remove from vehicle prior to removing fluids, engine or parts.
- Completely remove all fluids from vehicle and store in approved containers. Dispose of fluids safely and with approved methods.
- Engines are heavy. Use approved lifting devices with engine securely harnessed for removal, installation and transporting.
- Remove spark plugs prior to removing engine.
- Strap your engine to a shipping skid or pallet. If you need a crate to ship the engine, nFLOW will supply a crate for a \$100 US deposit.
- nFLOW will arrange and handle all shipping logistics so the engine will be picked up and delivered to your destination point or one near which the freight company chooses.
- Your engine core must not have holes or major damage to the aluminum housings. You will need a new engine core if your engine has major damage to the aluminum housings.
- nFLOW will disassemble and inspect the engine core upon arrival for hidden defects.
- Upon nFLOW's approval and acceptance of your engine core and full payment, nFLOW will ship a remanufactured engine ready for installation.
- You return the loaned nFLOW engine crate for your deposit back if you used an nFLOW crate.
- Install spark plugs and reconnect battery as the last steps during installation.
- Double check and thoroughly inspect all mounting bolts and connections for correct torque and with no leaks after re-installation of engine prior to starting.
- Fill engine crankcase with proper type of motor oil prior to starting.
- You must follow the break-in procedures to keep your limited warranty from being voided on your remanufactured engine. Break-in instructions are included with your remanufactured engine from nFLOW or please contact nFLOW for these instructions.
- Observe all safety warnings and requirements from manufacturer of vehicle.
- No one under the age of 18 is authorized to use nFLOW products.